



2013 NORWAY

Conditioner:
Cleaner:

Zone Configuration

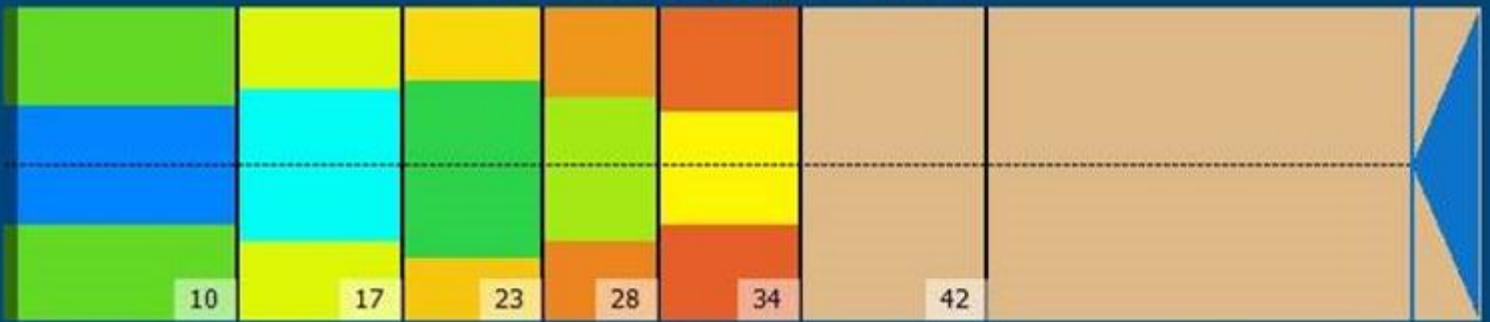

Cleaner Transition

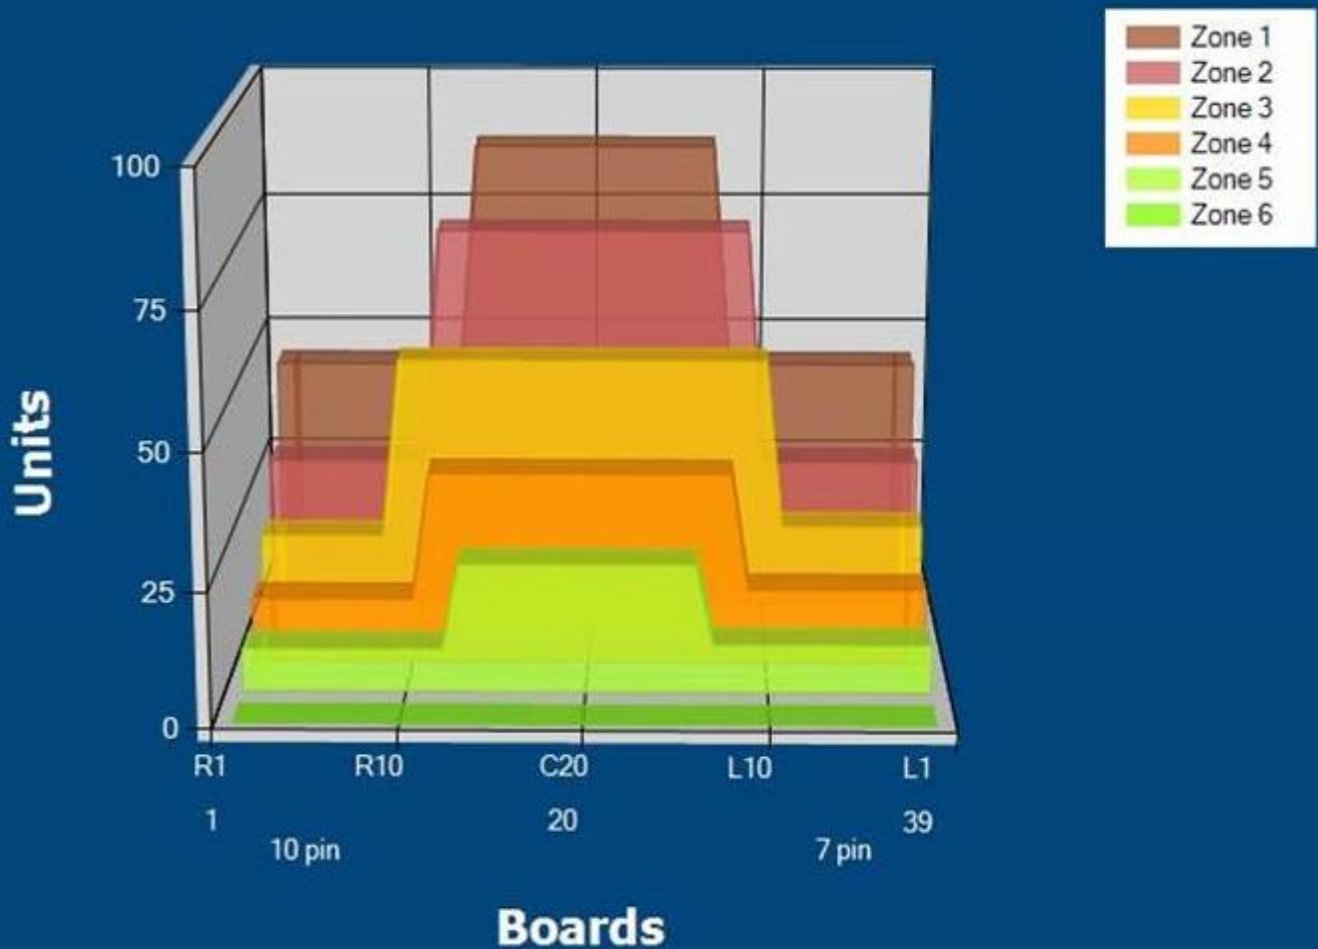

Mode: Clean and Condition

Speed: Max Clean

Start Cleaner Spray: 0 feet

Start Squeegee: 0 feet

Start Conditioning: 6 Inches

Split Pattern: No



ENVOY



AUTHORITY22®

Select Machine

Pattern Information

Date	13/9/13
Pattern Type	Sport
Pattern Difficulty	High
Pattern Designer	Pat Mitchell

Pattern Parameters

Pattern Number	1
Pattern Name	2013 NORWAY
Mode	Clean & Oil
Forward Speed	Max Clean
Start Cleaner Spray	0
Start Squeegee	0
Start Oiling	6
Split Pattern	No

Supplies Information

Lane Cleaner	Brunswick MAX10
Cleaner Mixture Ratio	10 : 1
Cleaner Transition Distance	Authority22
Cleaner Spray End Distance	53 Envoy
Lane Conditioner	Brunswick Connect


Notes _____

Surface Information

Surface Type	Synthetic
Surface Brand	AMF SPL
Age	3

	Zone 1	Zone 2	Zone 3	Zone 4	Zone 5	Zone 6	Zone 7	Zone 8
Zone End Distance	10	17	23	28	34	42		
Zone Ratio	L 1,9 : 1	2,5 : 1	2,5 : 1	2,5 : 1	2,6 : 1	### : 1	### : 1	### : 1
	R 1,9 : 1	2,5 : 1	2,7 : 1	3,0 : 1	3,0 : 1	### : 1	### : 1	### : 1

ZONE	7 Pin Side																	Board Number								10 Pin Side																				
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1							
1	44	44	44	44	44	44	44	44	44	44	44	44	87	87	87	87	87	87	87	87	87	87	87	87	87	87	87	87	44	44	44	44	44	44	44	44	44	44	44	44	44	44				
2	29	29	29	29	29	29	29	29	29	29	29	74	74	74	74	74	74	74	74	74	74	74	74	74	74	74	74	74	29	29	29	29	29	29	29	29	29	29	29	29	29	29	29			
3	21	21	21	21	21	21	21	21	21	21	53	53	53	53	53	53	53	53	53	53	53	53	53	53	53	53	53	53	53	19	19	19	19	19	19	19	19	19	19	19	19	19	19			
4	14	14	14	14	14	14	14	14	14	14	36	36	36	36	36	36	36	36	36	36	36	36	36	36	36	36	36	36	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12			
5	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
7																																														
8																																														

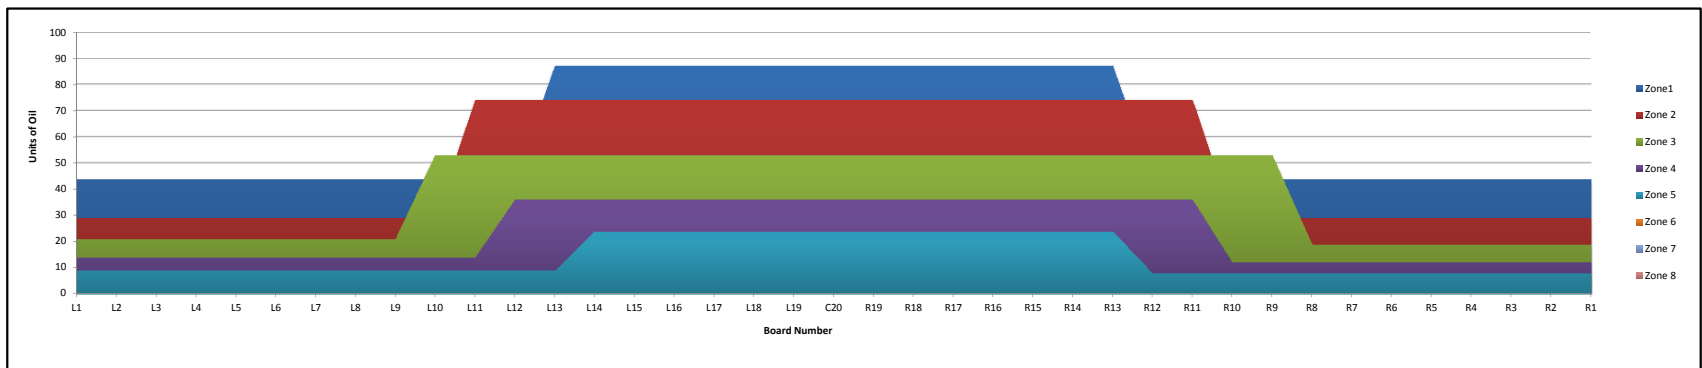



ENVOY AUTHORITY 22[®]

2013 NORWAY Crosswise Ratios

	Zone 1	Average	Ratio
3L-7L	Left =	44,0	1,9
3R-7R	Right=	44,0	1,9
18L-18R	Center =	87,0	

	Zone 2	Average	Ratio
3L-7L	Left =	29,0	2,5
3R-7R	Right=	29,0	2,5
18L-18R	Center=	74,0	

	Zone 3	Average	Ratio
3L-7L	Left =	21,0	2,5
3R-7R	Right=	19,0	2,7
18L-18R	Center=	53,0	

	Zone 4	Average	Ratio
3L-7L	Left =	14,0	2,5
3R-7R	Right=	12,0	3,0
18L-18R	Center =	36,0	

	Zone 5	Average	Ratio
3L-7L	Left =	9,0	2,6
3R-7R	Right=	8,0	3,0
18L-18R	Center=	24,0	

	Zone 6	Average	Ratio
3L-7L	Left =	0,0	#DIV/0!
3R-7R	Right=	0,0	#DIV/0!
18L-18R	Center=	0,0	

	Zone 7	Average	Ratio
3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right=	#DIV/0!	#DIV/0!
18L-18R	Center =	#DIV/0!	

	Zone 8	Average	Ratio
3L-7L	Left =	#DIV/0!	#DIV/0!
3R-7R	Right=	#DIV/0!	#DIV/0!
18L-18R	Center=	#DIV/0!	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

