



NM 2016

Crosswise Ratios (by units)

Zone 1				Zone 5				
	Average	Ratio		Average	Ratio			
3L-7L	Left = 33,0	2,7	3L-7L	Left = 0,0	#DIV/0!	3L-7L	Left = 0,0	#DIV/0!
3R-7R	Right = 33,0	2,7	3R-7R	Right = 0,0	#DIV/0!	3R-7R	Right = 0,0	#DIV/0!
18L-18R	Center = 90,0		18L-18R	Center = 0,0		18L-18R	Center = 0,0	
Zone 2				Zone 6				
3L-7L	Left = 20,0	3,2	3L-7L	Left = #DIV/0!	#DIV/0!	3L-7L	Left = 0,000	#DIV/0!
3R-7R	Right = 20,0	3,2	3R-7R	Right = #DIV/0!	#DIV/0!	3R-7R	Right = 0,000	#DIV/0!
18L-18R	Center = 65,0		18L-18R	Center = #DIV/0!		18L-18R	Center = 0,000	
Zone 3				Zone 7				
3L-7L	Left = 17,6	3,1	3L-7L	Left = #DIV/0!	#DIV/0!	3L-7L	Left = 0,000	#DIV/0!
3R-7R	Right = 17,6	3,1	3R-7R	Right = #DIV/0!	#DIV/0!	3R-7R	Right = 0,000	#DIV/0!
18L-18R	Center = 55,0		18L-18R	Center = #DIV/0!		18L-18R	Center = 0,000	
Zone 4				Zone 8				
3L-7L	Left = 9,8	3,8	3L-7L	Left = #DIV/0!	#DIV/0!	3L-7L	Left = 0,000	#DIV/0!
3R-7R	Right = 9,8	3,8	3R-7R	Right = #DIV/0!	#DIV/0!	3R-7R	Right = 0,000	#DIV/0!
18L-18R	Center = 38,0		18L-18R	Center = #DIV/0!		18L-18R	Center = 0,000	

Crosswise Ratios (by ml)

Zone 1				Zone 5				
	Average	Ratio		Average	Ratio			
3L-7L	Left = 0,124	2,7	3L-7L	Left = 0,000	#DIV/0!	3L-7L	Left = 0,000	#DIV/0!
3R-7R	Right = 0,124	2,7	3R-7R	Right = 0,000	#DIV/0!	3R-7R	Right = 0,000	#DIV/0!
18L-18R	Center = 0,340		18L-18R	Center = 0,000		18L-18R	Center = 0,000	
Zone 2				Zone 6				
3L-7L	Left = 0,059	3,2	3L-7L	Left = 0,000	#DIV/0!	3L-7L	Left = 0,000	#DIV/0!
3R-7R	Right = 0,059	3,2	3R-7R	Right = 0,000	#DIV/0!	3R-7R	Right = 0,000	#DIV/0!
18L-18R	Center = 0,191		18L-18R	Center = 0,000		18L-18R	Center = 0,000	
Zone 3				Zone 7				
3L-7L	Left = 0,066	3,1	3L-7L	Left = 0,000	#DIV/0!	3L-7L	Left = 0,000	#DIV/0!
3R-7R	Right = 0,066	3,1	3R-7R	Right = 0,000	#DIV/0!	3R-7R	Right = 0,000	#DIV/0!
18L-18R	Center = 0,207		18L-18R	Center = 0,000		18L-18R	Center = 0,000	
Zone 4				Zone 8				
3L-7L	Left = 0,029	3,8	3L-7L	Left = 0,000	#DIV/0!	3L-7L	Left = 0,000	#DIV/0!
3R-7R	Right = 0,029	3,8	3R-7R	Right = 0,000	#DIV/0!	3R-7R	Right = 0,000	#DIV/0!
18L-18R	Center = 0,111		18L-18R	Center = 0,000		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.



