



NORWAY 2017


Crosswise Ratios (by units)

Zone 1				Zone 5			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 35,0	2,8	3L-7L	Left = 19,0	2,0		
3R-7R	Right = 39,0	2,5	3R-7R	Right = 11,0	3,5		
18L-18R	Center = 100,0		18L-18R	Center = 39,2			
Zone 2				Zone 6			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 35,0	2,8	3L-7L	Left = 4,0	5,7		
3R-7R	Right = 37,0	2,6	3R-7R	Right = 4,0	5,7		
18L-18R	Center = 98,6		18L-18R	Center = 22,8			
Zone 3				Zone 7			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 31,0	2,6	3L-7L	Left = 0,0	#####		
3R-7R	Right = 25,0	3,2	3R-7R	Right = 0,0	#####		
18L-18R	Center = 82,0		18L-18R	Center = 0,0			
Zone 4				Zone 8			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 24,0	3,2	3L-7L	Left = #####	#####		
3R-7R	Right = 22,0	3,5	3R-7R	Right = #####	#####		
18L-18R	Center = 78,2		18L-18R	Center = #####			

Crosswise Ratios (by ml)

Zone 1				Zone 5			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,117	2,8	3L-7L	Left = 0,036	2,0		
3R-7R	Right = 0,131	2,5	3R-7R	Right = 0,021	3,5		
18L-18R	Center = 0,335		18L-18R	Center = 0,074			
Zone 2				Zone 6			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,073	2,8	3L-7L	Left = 0,008	6,3		
3R-7R	Right = 0,078	2,6	3R-7R	Right = 0,008	6,3		
18L-18R	Center = 0,207		18L-18R	Center = 0,053			
Zone 3				Zone 7			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,065	2,6	3L-7L	Left = 0,000	#####		
3R-7R	Right = 0,052	3,2	3R-7R	Right = 0,000	#####		
18L-18R	Center = 0,172		18L-18R	Center = 0,000			
Zone 4				Zone 8			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,055	3,2	3L-7L	Left = 0,000	#####		
3R-7R	Right = 0,051	3,5	3R-7R	Right = 0,000	#####		
18L-18R	Center = 0,180		18L-18R	Center = 0,000			

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

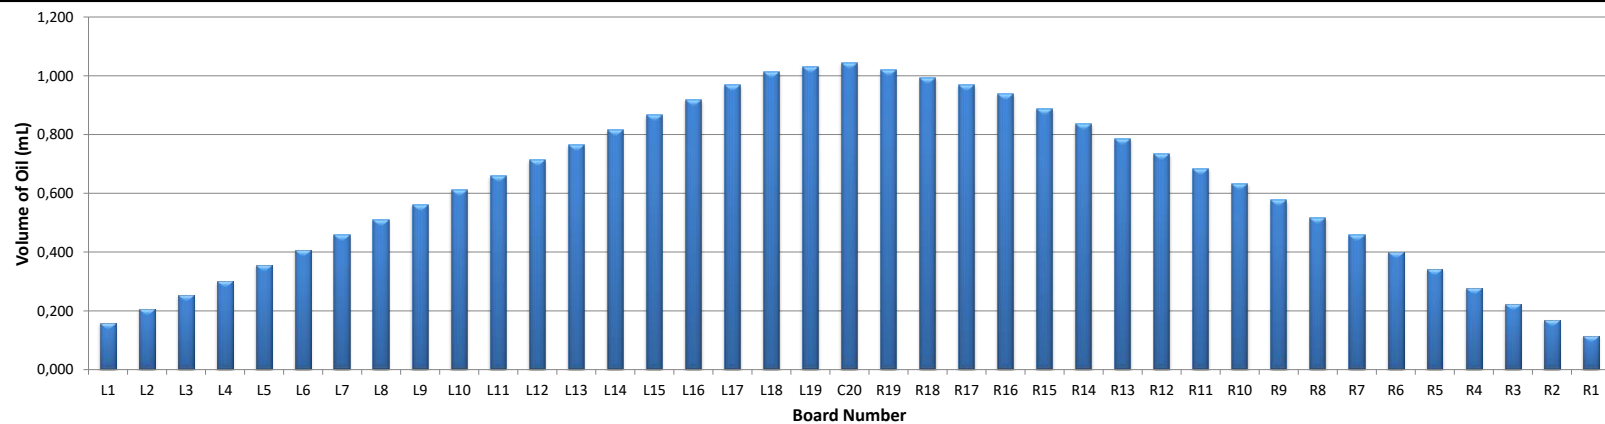

3L-7L:18L-18R	Ratio by Total Volume	18L-18R:7R-3R
2,87	1	3,00